Jumper Cap Remover Instruction

Jumper Cap Remover is bundled in this motherboard package. It is a user-friendly design to help you remove the jumper caps easily. The occasion to remove the jumper caps is when you need to adjust the jumper setting to fit with the CPU type that you install. For the information of CPU types and the corresponding jumper settings, please refer to the inside of the Quick Installation Guide.

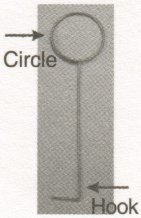

To use the Jumper Cap Remover properly, please follow the steps below.

STEP 1: Hold the Jumper Cap Remover by its circle, and put its hook through the center of the jumper cap **near the top**. (on certain specific motherboards, e.g., K8 Upgrade Series motherboards)

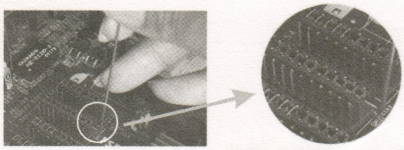

STEP 2: To avoid jumper cap springing out, please use the index finger of your other hand to press on the jumper cap, then pull up the Jumper Cap Remover gently.

STEP 3: Repeat with remaining jumper caps.